

7 vibration modes

**IPX7 Waterproof** 

Made from silicone and ABS plastic

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 90 minutes of play.



## **How To Use**

- K1: Press the power button to turn toy ON and LED light stays on. Vibrating start on Mode1,Press the power Button again to turn toy OFF.
- K2: Press vibration button once to switch between 7 modes.1.2.3.4.5.6.7...1.2.3.4.5.6.7.
  7 controlled vibration intensity programs



## Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.