

EROS

7 vibration modes

IPX7 Waterproof

**Made from silicone
and ABS plastic**

Charging

- For maximum pleasure charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 60 minutes of play.



Charging port

How To Use

- To enable the travel lock, press and hold the ON/OFF/Function button for 3 seconds while the device is off. The LED-indicator will flash twice indicating that the device is locked.
- To disable the travel lock, press and hold the ON/OFF/Function button for 3 seconds. The LED-indicator will flash twice indicating that the device is unlocked.
- Connect the toy to the charging port, this will automatically deactivate the
- For stopping vibrations, press and hold ON/OFF/Function button for 2 seconds.



power button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.