

# EROS

**15 vibration modes**

---

**IPX7 Waterproof**

---

**Made from silicone  
and ABS plastic**

## Charging

---

- For maximum pleasure charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 40 minutes of play.



Charging port

## How To Use

---

- K1: Press and hold the K1 button for 2 seconds, Toy is on standby . press and hold the K1 button again for 2 seconds to turn toy off.
- K2: Press K2 Button once while toy is on standby, toys start in mode1 , Continue to press button until desired function is reached. 1.2.3.4.5.6.7 8.9 10...15 function cycle..



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.