

EROS

7 vibration modes


3 Thrusting modes

IPX7 Waterproof

**Made from silicone
and ABS plastic**

Charging


- For maximum pleasure charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 50 minutes of play.

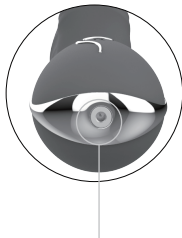

Charging port

How To Use

- K1:Unlock the Travel Lock first,Press ON/OFF button to turn on the toy, LED light stays on,indicating the toy is on standby;Press again to turn OFF.
- K2:Thrusting and vibrating in tip:Press thrusting program button to activate thrusting /vibration.3speeds for your choice.Press and hold the button for 2 seconds to turn the thrusting function/vibration OFF.
- K3:Press the button to activate rabbit vibration in mode.Every pressing times for adjustable modes. Press and hold this button for 2 seconds to turn off rabbit vibration
- Travel lock: Press and hold the ON/OFF button for 3 seconds when the toy is OFF. LEDlight will flash twice to indicate travel lock is active.Press and hold again to disable the travel lock or connect toy to the charging port. When charging,the travel lock will be auto released

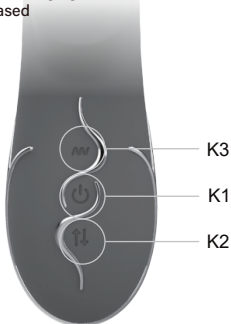

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.